 


3D HOLOGRAPHIC

V15/V20/V32

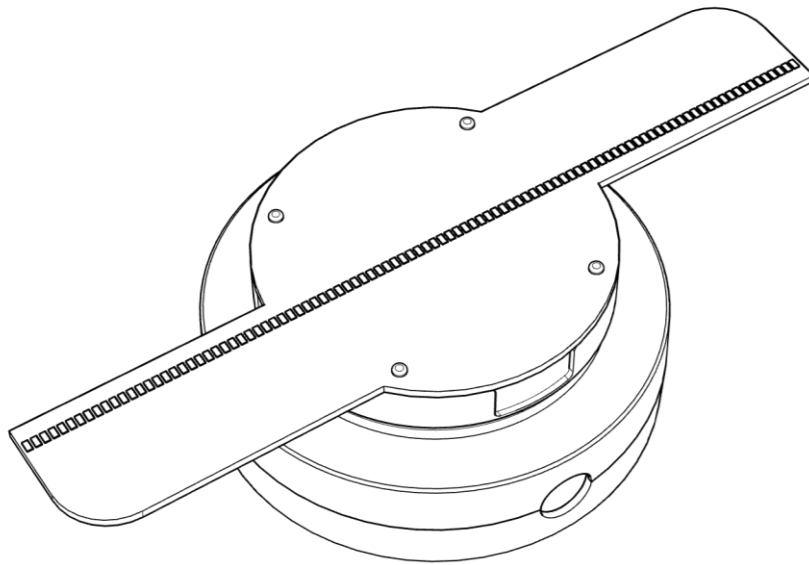

User Manual

Notes

- The device will start to rotate when it is powered on. It is strictly forbidden to touch the fan blades when the device is in operation, so as to avoid personal injury and device damage.
- Be sure to fix before device operation to a safe place, to prevent others from contacting or vibrations cause a drop.
- When the device is working, do not disassemble the device, otherwise it may cause abnormal operation on the device.
- Keep away from high temperature and high humidity environment. Do not use it outdoor if it is raining.
- Pay attention to maintenance and clean the device regularly.


Warning :

Please read this manual carefully before using the device. The personal and property losses caused by operating the device without following the instructions of the manual shall be borne by the user.

Parts list

No.	Items	Quantity
1	3D Hologram Fan	1
2	Adaptor	1
3	Remote Controller	1
4	Wall-mounting Part	1
5	Setscrew	1
6	Warranty Card	2
7	Certification Card	1
8	User Manual	1

 Remote Controller

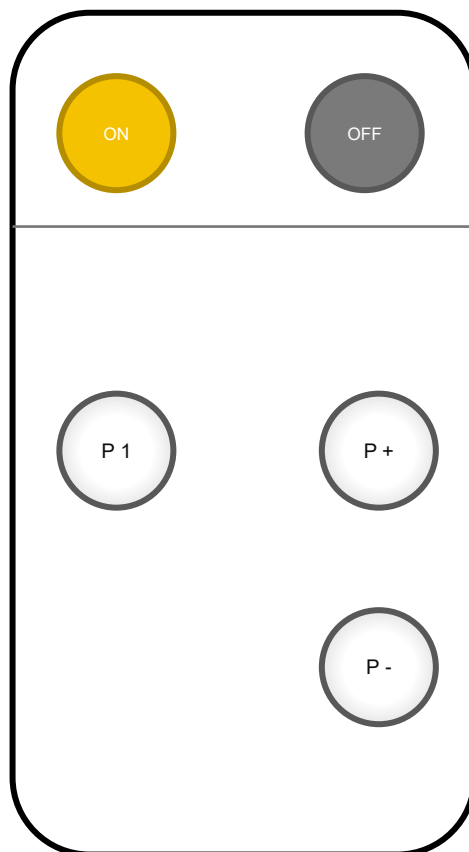


- ① ON : Start device ② OFF: Stop device ③ P 1: Play the first video
- ④ P +: Switch to the next video ⑤ P -: Switch to the previous video

How to Install


1、 Install fixed part

 Insert the fixing structure at the back of the device downward into the fixing piece and screw the fixing screw at the same time.

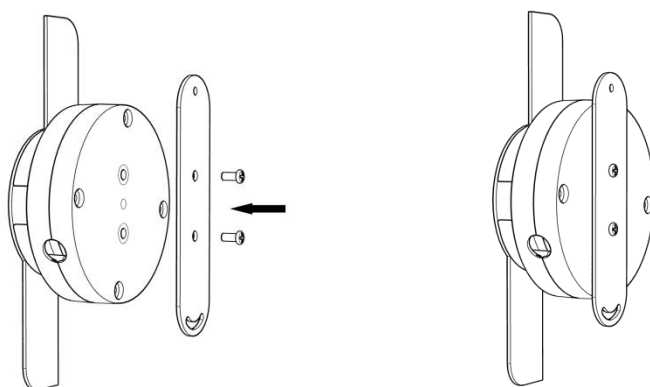

2、 Fix the device

Fix the fixed part to the wall with expansion screws or ordinary screws to facilitate the subsequent installation of the device and finish the installation.

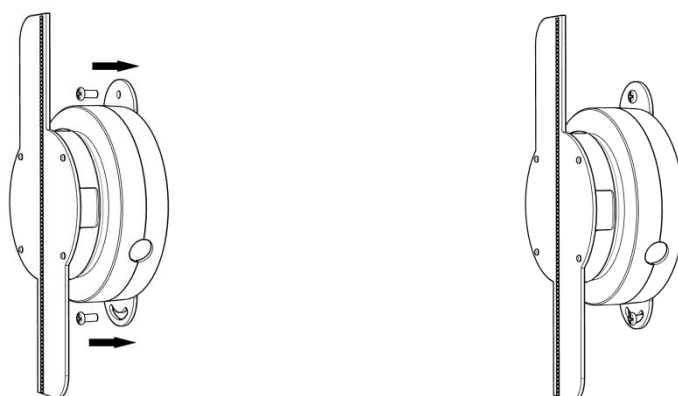

Instructions for use

3、 Connect the power supply

After the device is fixed, use the power adapter to connect to the power socket of the device to directly supply power to the device.

Note: The device will rotate automatically when it is powered on. Please pay attention to safety to avoid injury. ◦

4、 Remote control

(1) Turn on and off

Use the remote control to point the device, press "ON" on the remote control, the device will rotate; use the remote control to point the device, press "OFF" on the remote control, the device will stop rotating.

(2) Switch video content

Use the remote control to aim at the device, press "P+" on the remote control to switch to the next video, press "P-" to switch to the previous video, and press "P1" to switch to the first video.

5、 Mobile APP Control

(1) Download App software

Download URL: <http://down.holocloud.online>

Downloaded by scanning the QR code on the right

- Apple mobile phones are available in the app store
Search 3D Magic download



(2) Connecting device

When the devices are powered on, each device will emit corresponding WIFI (check the label sticker on the back of the device for the WIFI and password). Turn on the wireless function of the mobile phone. Find the WIFI of the corresponding device and enter the password. After connecting the WIFI of the device, open the APP and the device will automatically connect.

(3) Switching device (On or OFF)

Click the switch button on the APP to turn on/off the device.

(4) Upload video

Click "Upload" to upload videos or photos to the device.

(5) Switch video content

Click on a video in the list, it will automatically switch to play the corresponding video.

(6) Edit video

Click "Edit" to edit the video. Including: delete, rename, drag sort, etc.

(7) Other settings

Click "Settings" below to adjust brightness, angle, playback mode, etc.

6、 Upload content

The device supports mobile APP and computer upload content.

Computer transcoding video tutorial:



Product specification

Product model	V15	V20	V32
Device area	15cm	18cm	32cm
Number of lamp beads	148	176	212
Resolution	296*296	352*352	424*424
Input voltage	12V		
Rated power	12W	12W	18W
Memory capacity	4G		
Support format	Picture: jpg, jpeg, png, gif Video: mp4, avi, rmvb, mkv, wmv, mov, flv		
Content upload	APP、 PC (Only support Windows System)		
Holo Wall	None		

Warranty

Warranty:

1. Within one year from the date of sale of the product, if there is a failure (excluding due to abnormal operation, unauthorized disassembly, improper storage, use of unspecified accessories and power supply) and it has been confirmed to be under normal trial use, the company will provide repair or replacement services.
2. The company is not responsible for any special, incidental or indirect damages

Statement:

Provide purchase record & warranty card for free repair.

Provide paid repair service for the machine which out of warranty period.

Please send it back by formal courier company.

WARRANTY CARD			
User	Name :		
	Purchase Date :		
	Contact :		
Service	Repair Date	Error Description	Service Person